

FRONT PANEL: Brushed black anodized aluminum. LEVEL ADJUSTMENTS pots for Left and Right speakers 1 through 8 (behind removable panel).

✓ Power ON indicator. Switches for loudspeakers 1 through 8 plus AUXiliary. Power ON or OFF switch. Panloc mounting buttons.



REAR PANEL: [Left and Right INPUT FROM SOURCE jacks. Left and Right TO **POWER AMP INPUT** jacks. \checkmark Left and Right **HOT TERM**inal spade connectors. \checkmark Left and Right COMmon TERMinal spade connectors.] / [Speaker 8 section: Left and Right jacks. \checkmark EQ: OUT or IN switch. \checkmark FROM / EQ jacks. \checkmark Right **TO SPEAKERS** spade connectors.] / [Speaker **7** section: Left and Right jacks. EQ: OUT or IN switch.

▼ FROM / EQ jacks.

▼ Left and Right TO SPEAKERS spade connectors.] / [Speaker 6 section: Left and Right jacks. \checkmark EQ: OUT or IN switch. FROM / EQ jacks. Left and Right TO SPEAKERS spade connectors. ✓ Speaker 5 section: Left and Right jacks.
✓ EQ: OUT or IN switch.
✓ FROM Left and Right TO SPEAKERS spade connectors.] / [Speaker 4 section: Left and Right jacks. ← EQ: OUT or IN switch. ← FROM / EQ jacks. ← Left and Right TO SPEAKERS spade connectors.] / [Speaker 3 section: Left and Right jacks. ★ EQ: OUT or IN switch. ★ FROM / EQ jacks. ★ Left and Right TO OUT or IN switch.

★ FROM / EQ jacks.

★ Left and Right TO SPEAKERS spade connectors.1



The Compendium

✓ [Speaker 2 section: Left and Right jacks. ✓ EQ: OUT or IN switch. ✓ FROM / EQ jacks. ✓ Left and Right TO SPEAKERS spade connectors.] ✓ [Speaker 1 section: Left and Right jacks. ✓ EQ: OUT or IN switch. ✓ FROM / EQ jacks. ✓ Left and Right TO SPEAKERS spade connectors.] ✓ [Left and Right AUXiliary SOURCE JACKS. ✓ Left and Right TO AUXiliary POWER AMP JACKS. ✓ TO AUXiliary POWER AMP TERMINALS spade connectors.] ✓ SPEAKER LIGHTS connector. ✓ Fuse. ✓ Power cord.





P 349 - Sold from ???? - ????. S/N: BJ1001~BJ???? (?,???? UNITS)

Size: 5-7/16"H, 16"W and 13"D. **Weight:** ? lb. **\$???.00**