


Remove the plastic shipping feet from the bottom of the instrument (if attached):

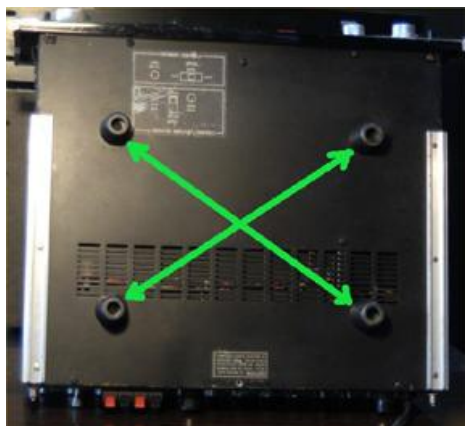

Guide the AC power cord through the panel opening to the back of the cabinet. Then slide the instrument into the opening carefully so that the rails on the bottom of each side of the instrument chassis engage the tracks on the **PANLOC** mounting brackets:



Continue to slide the instrument into the cabinet until it is stopped by the “**adjust**” **position latches** on the side of the instrument. This “**adjust**” **position** allows access to the top controls on many instruments:



Press the instrument "adjust" position latches on each side inward:



This permits the instrument to slide further into the cabinet until its front panel is flush with the cabinet panel.

Depress the **PANLOC** buttons at the lower left and right corners of the instrument panel to **lock** the unit firmly in the cabinet:



The "cup" on the rear end of the **PANLOC** rods must engage the receptacle on the rear of each **PANLOC** bracket for the **PANLOC** buttons to lock the instrument in place:



Depressing the **PANLOC** buttons again will **unlock** the instrument so that it can be slid forward to the "adjust" position. Pressing inward on the "**adjust**" **position latches** permits removal of the instrument from the cabinet.